



INSTALLATION GUIDE - for board-level products

Thank you for buying EDT products. Use this document (with edt.com or the provided CD) for install / uninstall instructions and other support details.

Documentation, updates, support

On this installation CD, open the installation panel and select Documentation; or, in a file manager, select `manuals.html`. For updates, see edt.com/product-data. For support, see edt.com/support.

Hardware install / uninstall and cabling

Caution To reduce the risk of damage from electrostatic discharge (ESD), use standard electrostatic-dissipative procedures (see edt.com/static).

- To install: Power off all equipment and use the appropriate cabling from EDT (see edt.com/cables) or from your distributor.
 - Boards: Use your computer manufacturer's instructions. Put each board in a slot with at least the specified number of lanes for PCIe boards; then power on.
 - Systems and other products: See the user guide on the installation CD or, for updates, at edt.com/product-data.
- To uninstall: Power off all equipment; then remove each product.

Software install / uninstall

Install software from the installation CD, or see updates at edt.com/product-data.

Windows

- To install: Log in as administrator and put the CD in the CD-ROM drive.

International Distributors



Sky Blue Microsystems GmbH
Geisenhausenerstr. 18
81379 Munich, Germany
+49 89 780 2970, info@skyblue.de
www.skyblue.de

1. Obey the prompts in the installation panel. If it does not appear, open the CD in a file manager and select `winsetup.bat`.
 2. When you see a prompt to do so, reboot.
- To uninstall: Log in as administrator; use Windows Add/Remove utility.

Linux (review Linux dependencies at edt.com/linux-pkg-requirements)

- To install: Put the CD in the CD-ROM drive; then, as root, do this...
 1. In a terminal window: Open the CD-ROM directory (typically `mnt/cdrom` or `media/cdrom`) and navigate to the Linux directory (for example, `cd /mnt/cdrom/linux`).
 2. Do one of the following, replacing `<pkg>` with your package type (`pdv` or `pcd`) and `<ver>` with the package version number.
 - For RPM-based distributions (RedHat/Fedora, etc.), enter...

```
sudo rpm -i ./EDT<pkg>-<ver>.noarch.rpm
```
 - For Debian/Ubuntu distributions, enter...

```
sudo ./EDT<pkg>_lnx_<ver>.run
```
- To uninstall: As root, do the steps below, replacing `<pkg>` with your package type (`pdv` or `pcd`)...
 1. To verify how the package was installed, enter...

```
rpm -q EDT<pkg>
```
 2. If the result shows the package was installed with RPM, enter...

```
rpm -e EDT<pkg>
```

If not, navigate to the directory in which the software was installed (by default, `/opt/EDT<pkg>`) and enter...

```
./uninstall.sh
```



In Great Britain:
Zerif Technologies Ltd.
Winnington House, 2 Woodberry Grove
Finchley, London N12 0DR
+44 115 855 7883, info@zerif.co.uk
www.zerif.co.uk