



# **Komodo II Fiber Frame Grabber**

**(Part-No. KY-FGFII)**

**December 2018**  
**Hardware Reference**  
**and Installation Guide**

International Distributor

---

**sky blue**  
microsystems

Sky Blue Microsystems GmbH  
Geisenhausenerstr. 18  
81379 Munich, Germany  
+49 89 780 2970, [info@skyblue.de](mailto:info@skyblue.de)  
[www.skyblue.de](http://www.skyblue.de)

---

1	Figures and Tables.....	3
2	Introduction .....	5
2.1	Safety Precautions .....	5
2.2	Disclaimer.....	6
3	Key Features.....	8
3.1	Overview .....	8
3.2	Features.....	8
3.3	Product Applications .....	9
3.4	Related documents and accessories.....	10
4	System Description.....	11
4.1	Example System Block Diagram .....	11
4.2	External View of the Komodo II Fiber Frame Grabber .....	12
5	Mechanical Specifications.....	13
5.1	Essentials to get started .....	13
6	Installation and Configuration.....	14
6.1	Komodo II Fiber Frame Grabber installation instructions .....	14
6.2	Installing and Removing SFP+ Modules .....	14
6.2.1	Precautions.....	15
6.2.2	Installing the SFP+ Module.....	15
6.2.3	Connecting the interface cable to SFP+ Module.....	16
6.2.4	Removing the SFP+ Module .....	17
6.3	Reducing the fiber optic cable count.....	19
6.3.1	Bidirectional (BIDI) SFP+ option .....	19
6.3.2	CWDM Option .....	20
7	Hardware reference .....	21
7.1	Komodo II Fiber Block Diagram .....	21

7.2 Komodo II Fiber LEDs.....21

7.3 Auxiliary Input/Output signals.....23

7.4 Absolute maximum ratings .....25

7.5 Operating conditions .....26

7.6 Mechanical dimensions .....28

8 Appendices .....29

8.1 Fiber cables.....29

9 Ordering information.....30

9.1 Ordering information.....30

## Figures

FIGURE 1 : SYSTEM BLOCK DIAGRAM.....	11
FIGURE 2 : KOMODO II FIBER FRAME GRABBER EXTERNAL VIEW.....	12
FIGURE 3: SFP+ MODULE WITH BALE CLASP OPEN AND DUST PLUG REMOVED.....	16
FIGURE 4: INSTALLING AN SFP+ MODULE INTO A PORT .....	16
FIGURE 5: SFP+ MODULE WITH TX OUTPUT AND RX INPUT MARKED .....	17
FIGURE 6: CONNECTING THE CABLE TO SFP+ MODULE .....	17
FIGURE 7: OPENING THE BALE CLASP OF AN SFP+ MODULE.....	18
FIGURE 8: REMOVING AN SFP+ MODULE FROM THE PORT.....	18
FIGURE 9: SFP+ MODULE WITH BALE CLASP OPEN .....	18
FIGURE 10 : KOMODO II FIBER BIDIRECTIONAL SFP+ OPTION.....	19
FIGURE 11 : CWDM MODE FOR SINGLE FIBER .....	20
FIGURE 12 : CWDM MODE FOR DUAL FIBER .....	20
FIGURE 13 : KOMODO II FIBER BLOCK DIAGRAM .....	21
FIGURE 14 : KOMODO II FIBER LED'S LOCATIONS .....	22
FIGURE 15 : GPIO CONNECTORS LOCATION .....	23
FIGURE 16 : GPIO CONNECTOR SCHEMATIC .....	25
FIGURE 17 : PCB MECHANICAL DIMENSIONS .....	28

## Tables

TABLE 1 : KOMODO II FIBER LINKS STATUS LED’S .....22

TABLE 2 : KOMODO II FIBER STATUS LED’S .....22

TABLE 3 : J1 CONNECTOR PINOUT .....24

TABLE 4 : ABSOLUTE MAXIMUM RATINGS.....25

TABLE 5 : ABSOLUTE MAXIMUM RATINGS FOR GPIO.....26

TABLE 6 : OPERATING CONDITIONS.....26

TABLE 7 : LVDS OUTPUT DC SPECIFICATIONS (DRIVER OUTPUTS) .....27

TABLE 8 : LVDS INPUT DC SPECIFICATIONS (RECEIVER INPUTS).....27

TABLE 9 : LVTTL INPUT SPECIFICATIONS .....27

TABLE 10 : LVTTL OUTPUT SPECIFICATIONS.....27

TABLE 11 : TTL INPUT SPECIFICATIONS .....27

TABLE 12 : TTL OUTPUT SPECIFICATIONS .....28

TABLE 13 : ORDERING INFORMATION .....30

## Revision History

Version	Date	Notes
1.0	20.12.18	Initial Release
1.1	19.02.19	Minor corrections

### 2.1 Safety Precautions

With your *Komodo II Fiber* Frame Grabber in hand, please take a minute to read carefully the precautions listed below in order to prevent unnecessary injuries to you or other personnel or cause damage to property.

- **Before using the product, read these safety precautions carefully to assure correct use.**
- **These precautions contain serious safety instructions that must be observed.**
- **After reading through this manual, be sure to act upon it to prevent misuse of product.**



**Caution**

**In the event of a failure, disconnect the power supply.**

If the product is used as is, a fire or electric shock may occur. Disconnect the power supply immediately and contact our sales personnel for repair.

**If an unpleasant smell or smoking occurs, disconnect the power supply.**

If the product is used as is, a fire or electric shock may occur. Disconnect the power supply immediately. After verifying that no smoking is observed, contact our sales personnel for repair.

**Do not disassemble, repair or modify the product.**

Otherwise, a fire or electric shock may occur due to a short circuit or heat generation. For inspection, modification or repair, contact our sales personnel.

**Do not touch a cooling fan.**

As a cooling fan rotates in high speed, do not put your hand close to it. Otherwise, it may cause injury to persons. Never touch a rotating cooling fan.

**Do not place the product on unstable locations.**

Otherwise, it may drop or fall, resulting in injury to persons or failure.

**If the product is dropped or damaged, do not use it as is.**

Otherwise, a fire or electric shock may occur.

**Do not touch the product with a metallic object.**

Otherwise, a fire or electric shock may occur.

**Do not place the product in dusty or humid locations or where water may splash.**

Otherwise, a fire or electric shock may occur.

**Do not get the product wet or touch it with a wet hand.**

Otherwise, the product may break down or it may cause a fire, smoking or electric shock.

**Do not touch a connector on the product (gold-plated portion).**

Otherwise, the surface of a connector may be contaminated with sweat or skin oil, resulting in contact failure of a connector or it may cause a malfunction, fire or electric shock due to static electricity.

**Do not use or place the product in the following locations.**

- Humid and dusty locations
- Airless locations such as closet or bookshelf
- Locations which receive oily smoke or steam
- Locations close to heating equipment
- Closed inside of a car where the temperature becomes high
- Static electricity replete locations
- Locations close to water or chemicals

Otherwise, a fire, electric shock, accident or deformation may occur due to a short circuit or heat generation.

**Do not place heavy things on the product.**

Otherwise, the product may be damaged.

**Be sure to drain static electricity from body before you touch any electronics component**

The electronic circuits in your computer and the circuits on Komodo II Fiber Frame Grabber are sensitive to static electricity and surges. Improper handling can seriously damage the circuits. In addition, do not let your clothing come in contact with the circuit boards or components. Otherwise, the product may be damaged.

## 2.2 Disclaimer

- This product should be used for interfacing of CLHS/10GigE camera and acquiring of CLHS/10GigE video streams. KAYA Instruments assumes no responsibility for any damages resulting from the use of this product for purposes other than those stated.

Even if the product is used properly, KAYA Instruments assumes no responsibility for any damages caused by the following:

- Earthquake, thunder, natural disaster or fire resulting from the use beyond our responsibility, acts caused by a third party or other accidents, the customer's willful or accidental misuse or use under other abnormal conditions.
- Secondary impact arising from use of this product or its unusable state (business interruption or others).
- Use of this product against the instructions given in this manual or malfunctions due to connection to other devices.

KAYA Instruments assumes no responsibility or liability for:

- Erasure or corruption of data arising from use of this product.
- Any consequences or other abnormalities arising from use of this product, or damage of this product not due to our responsibility or failure due to modification.

Repair of this product is carried out by replacing it on a chargeable basis, not repairing the faulty devices. However, non-chargeable replacement is offered for initial failure if such notification is received within two weeks after delivery of the product.



### 3.1 Overview

Komodo II Fiber is a high-performance yet low-cost FPGA card supporting four SFP+ 10G transceivers optical interface. The board offers a flexible DDR4 memory system with 4 GB onboard video cache and 55 GByte/s throughput. A high speed x8 lane Gen 3.0 PCI express interface allows fast data transfers between optical links and computer memory while a versatile GPIO with multi-standard support enables connection to external devices. The SFP+ interfaces are connected directly to FPGA device transceiver channels to minimize latency. All of these features combine make the Komodo II Fiber ideal for a wide range of applications, including network processing and security, compute and storage, instrumentation, broadcast, defense and aerospace.

### 3.2 Features

- 4 x SFP+ channels at 10 Gbps each
- PCIe Gen3 x8 Half-length card
- 4GB DDR4 SODDIMM 64 bit data width
  - DDR4 1066 rate compatible
- Multi-stream support
- Camera controls and triggers
- Per-link LED indication on card bracket
- Multiple Camera synchronization
- Multiple Frame Grabbers synchronization
- Flexible machine I/O:
  - 4 TTL configurable I/Os
  - 4 LVCMOS configurable I/Os
  - 2 LVDS inputs
  - 2 LVDS outputs
  - 4 opto-isolated outputs
  - 4 opto-isolated inputs
  - 2 quadrature rotary encoders
  - Integrated strobe controller
  - 4 timers

- Optical interface
- GUI interface
- Supporting Windows and Linux OS
- API for developing custom applications
- Plug-ins modules for MATLAB, HALCON and Labview
- GenCam compliant
- GenTL support
- Data rates up to 10 Gbps per link
- Transfer Rate of up to 55 Gbps through PCIe
- Transfer Rate of up to 40 Gbps through optical interfaces
- CWDM support
- Authentication device for design security
- Temperature control
- Fan control
- 4 indication LEDs
- 0°C to 55°C operating environment temperature
- On board Image processing
- Color space conversion with selectable bit depth
- Bayer de-mosaicing with selectable bit depth
- Tap re-ordering
- Color correction
- Custom processing engines

### 3.3 Product Applications

- Machine Vision
- Networking
- Algorithm Acceleration
- Broadcasting and sports analytics
- High-speed DVRs

### 3.4 Related documents and accessories

#### Documents:

- Vision Point App User Guide
- Vision Point API Reference Book
- CLHS/10GigE standards

#### Accessories:


- SFP+ optical modules
- Fiber cables (Multi or Single mode)
- GPIO extension panel

### 4.1 Example System Block Diagram

The Komodo II Fiber Frame Grabber supports multiple modes of configuration and system topology. Few of these are presented in following diagrams.

#### Single Camera Topology:

One Single, Dual or Quad links with 10Gbps per link topology.  
Maximum throughput to PCIe of 55 Gb/sec.

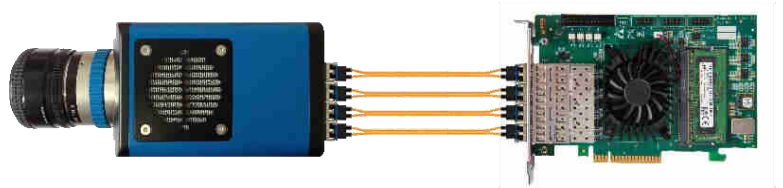

#### Quad Camera Topology:

Four Single or Dual links with 10Gbps per link topology.  
Maximum throughput to PCIe of 55 Gb/sec.

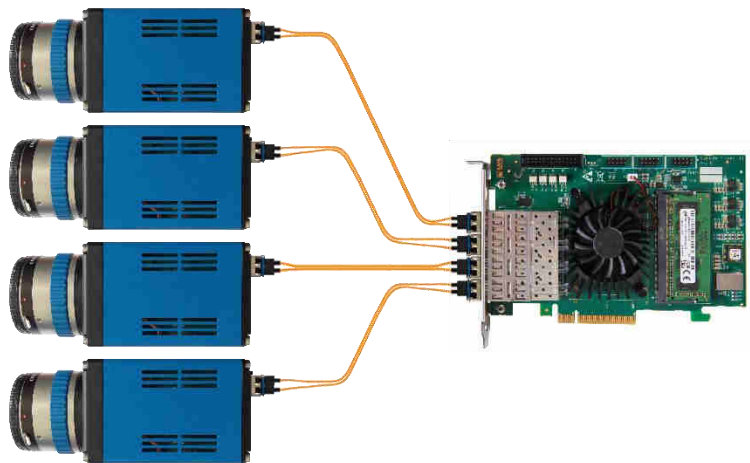


Figure 1 : System block diagram

4.2 External View of the Komodo II Fiber Frame Grabber

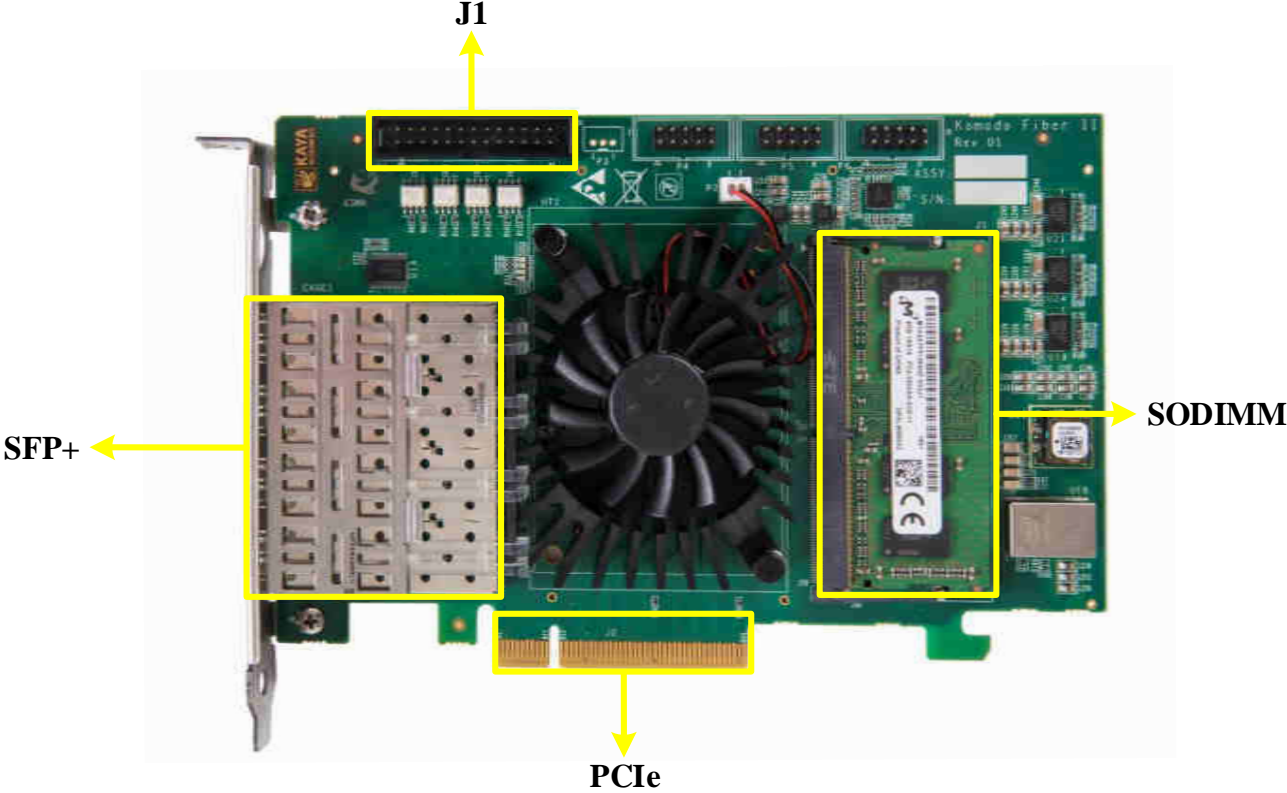


Figure 2 : Komodo II Fiber Frame Grabber external view

### 5.1 Essentials to get started

To begin using your Komodo II Fiber Frame Grabber, you must have the following:

- ✓ A computer with the following:
  - Processor with an Intel 64-bit architecture, or equivalent.
  - An available x4 (or x8 or x16) PCIe slot. Gen 3 support is recommended for faster data transfer.
  - Vision Point Application installation
- CLHS/10GigE camera
- ✓ Fiber optic cables

NOTE: KAYA Instruments doesn't guarantee compatibility with all computers that have the above specifications. Please, consult KAYA representative for any specific issue.

### 6.1 Komodo II Fiber Frame Grabber installation instructions

Before system installation the Komodo II Fiber Frame Grabber should be installed into host computer. Komodo II Fiber Frame Grabber is standard PCIe card with 8 lanes connector.

It can be installed in any PCIe connector of the motherboard with 8 lanes and up.

Note: Frame Grabber should be installed before you install your software.

1. Before installing, turn off the power of the computer and its peripherals.
2. Use an ESD-preventive glove, wrist or ankle strap and follow its instructions for use.
3. Make sure there is no dust or any other foreign matter inside the PCIe slot and the Frame Grabbers PCIe connector, or blocking any of the connectors.
4. Firmly insert the Komodo II Fiber Frame Grabber to PCIe connector of the motherboard.
5. Anchor the PCIe bracket to the computer chassis using M3 screw.
6. Verify the Komodo II Fiber Frame Grabber inserted correctly to the PCIe slot.
7. After OS is up, you will be asked to install a driver for new Multimedia Device.  
At this stage, you should cancel the installation.

Under Windows and Linux OS the compatible drivers for **Komodo II Fiber Frame Grabber** will be installed during installation of Vision Point software application.

You can install and use multiple **Komodo II Fiber Frame Grabbers** in a single computer.

The number of **Komodo II Fiber Frame Grabber** that can be installed in a computer depends on the number of available PCIe slots.

### 6.2 Installing and Removing SFP+ Modules

The purpose of this section is to demonstrate how to install SFP+ transceiver module, attach an optical network cable and remove an SFP+ transceiver module. It is necessary to understand the correct way of installing and removing an SFP+ transceiver, as correct operation can protect the module from being damaged and ensure its stable performance.

Before removing or installing an SFP+ module, please follow the precautions and installation instructions.

### 6.2.1 Precautions

1. Use an ESD-preventive wrist or ankle strap and follow its instructions for use.
2. Make sure there is no dust or any other foreign matter inside the SFP+ module, or blocking any of the connectors.
3. Clean the optic surfaces of the fiber cables before plugging them into the optical ports of an SFP+ module.
4. Removing and inserting a module can shorten its useful life, so you should not remove and insert the module any more often than is absolutely necessary.
5. Insert the clean dust covers into the module after the cables are removed. Do not remove the dust plug until you are ready to attach the network interface cable.
6. Do not install or remove the SFP+ module with fiber-optic cables attached to it because of the potential of damaging the cable, the cable connector, or the optical interfaces in the module.
7. Disconnect all cables before removing or installing a module.
8. Place the removed module on an antistatic mat or a static shielding bag if you plan to return it to the factory.
9. Protect the line card by inserting clean module cage covers into the optical module cage when there is no module installed.
10. Keep the protective dust plugs installed in the unplugged fiber-optic cable connectors and in the transceiver optical bores until you are ready to make a connection.

### 6.2.2 Installing the SFP+ Module

In order to install the SFP+ module, follow these steps:

1. The Komodo II Fiber Frame Grabber supports the following SFP+ modules:
  - KY-SFP-10G31-10 – Allows of up to 10km connection over single mode fiber cable.
  - KY-SFP-10G85-3M – Allows of up to 300m connection over multi-mode fiber cable.
2. Remove the dust plugs from the module as shown in Figure 3.
3. The SFP+ module has a bale clasp that used to remove or install the SFP+ module.
4. Close the bale clasp before inserting the SFP+ module.
5. Line up the module with the port and slide it into the port as shown in Figure 4.
6. Make sure that the male connectors on the module will align with the female connectors inside the cage.



7. Verify that the modules are completely seated and secured in their assigned receptacles on the line card by firmly pushing on each module. In case the module is not completely seated and secured in the receptacle, you will hear a click as the triangular pin on the bottom of the module snaps into the hole in the receptacle.
8. Follow the exact steps to insert additional module into the cameras fiber interface.

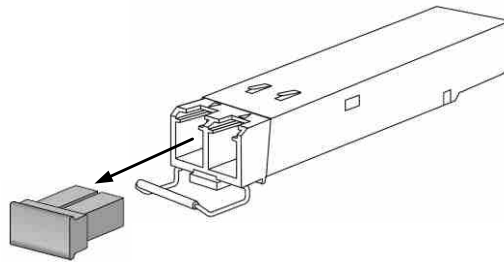


Figure 3: SFP+ Module with bale clasp open and dust plug removed

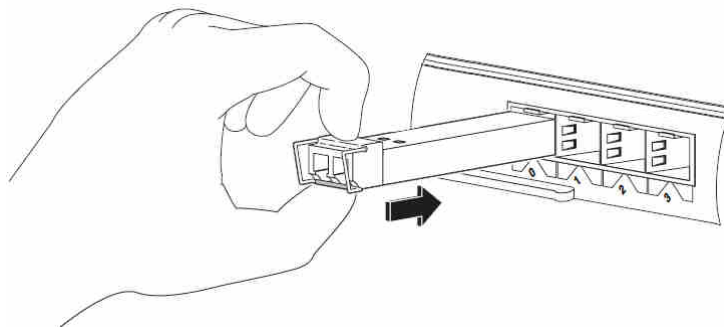


Figure 4: Installing an SFP+ Module into a port

### 6.2.3 Connecting the interface cable to SFP+ Module

In order to properly connect the fiber optic cables, the following steps must be taken:

1. Remove the protective dust plugs from the fiber-optic cable connectors.
2. Perform the connection according to the instructions below:
  - a. Link 0 of the system must be always connected as controls are delivered with this port.
  - b. A Fiber connection must be done to the same port number all over the way from camera to Frame Grabber.
  - c. A fiber cable should match an SFP+ type. If a single mode SFP+ is used a single mode fiber (yellow) should be attached to it. If a multi-mode SFP+ is used a multi-mode fiber (orange) should be attached.
  - d. On Fiber channel 0 both the TX and RX fiber cables must be connected. On channels 1 through 3 only one fiber cable should be connected. This cable is connected between

TX output (Marked with TX or Arrow outwards the SFP+) on the camera and RX input (Marked with RX or Arrow inwards the SFP+) on the Frame Grabber, as shown in Figure 5.

- e. If more than a single cable is used to connect to the same Frame Grabber, the cables must be of the same type and length.
3. Insert the fiber cable into the module, as shown in Figure 6.
4. Firmly push on each cable, until you will hear a click.
5. Connect the other side of the fiber cables to the cameras SFP+ module.
6. Turn the camera and the computer on and start your Vision Point software application.

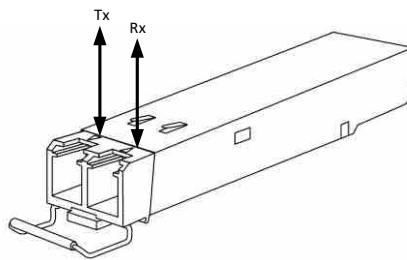


Figure 5: SFP+ Module with TX output and RX input marked

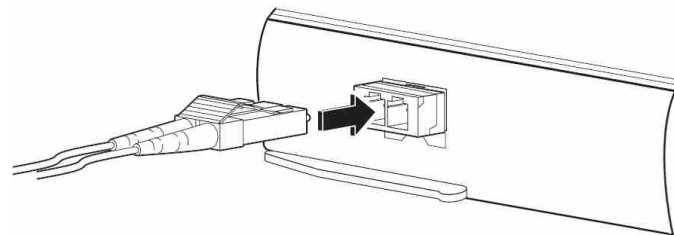


Figure 6: Connecting the cable to SFP+ Module

### 6.2.4 Removing the SFP+ Module

In order to remove the SFP+ module, follow these steps:

1. Turn the camera and the computer off.
2. Disconnect and remove all interface cables from the ports.
3. Open the bale clasp on the SFP+ module with your index finger, or a small flat-blade screwdriver, in a downward direction, as shown in Figure 7.
4. Grasp the module between your thumb and index finger and carefully remove it from the port, as shown in Figure 8.
5. Insert the clean dust covers into the module, as shown in Figure 9.

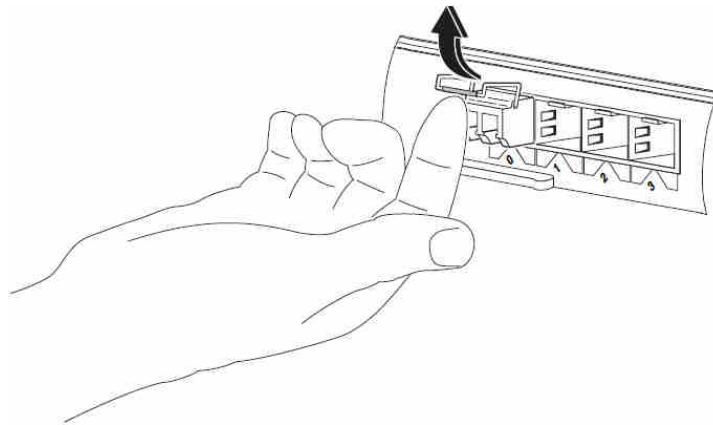


Figure 7: Opening the bale clasp of an SFP+ Module

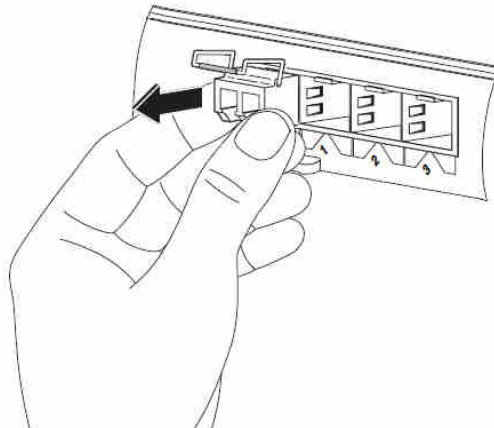


Figure 8: Removing an SFP+ Module from the port

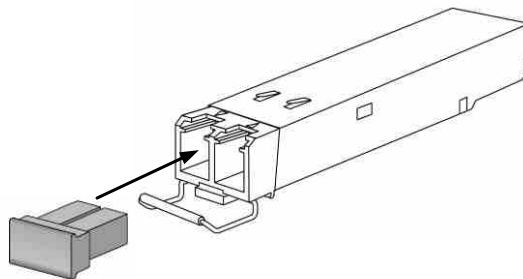


Figure 9: SFP+ Module with bale clasp open

### 6.3 Reducing the fiber optic cable count

The system requires  $2*N$  fiber optical cables in order to properly operate. The N is the number of fiber links required for the camera. But sometimes it required transferring the data over smaller number of cables.

Several options listed in the sections below exist in order to reduce the number of required optical cables. Please note that these options are available for single mode fiber infrastructure only.

Please contact KAYA representative for details of those options.

#### 6.3.1 Bidirectional (BIDI) SFP+ option

The BIDI SFP+ can transfer data in both the directions over a single fiber cable. This option allows reducing one fiber optic cable from the system by factor of 2. For example, 4 link cameras will require 4 fiber cables.

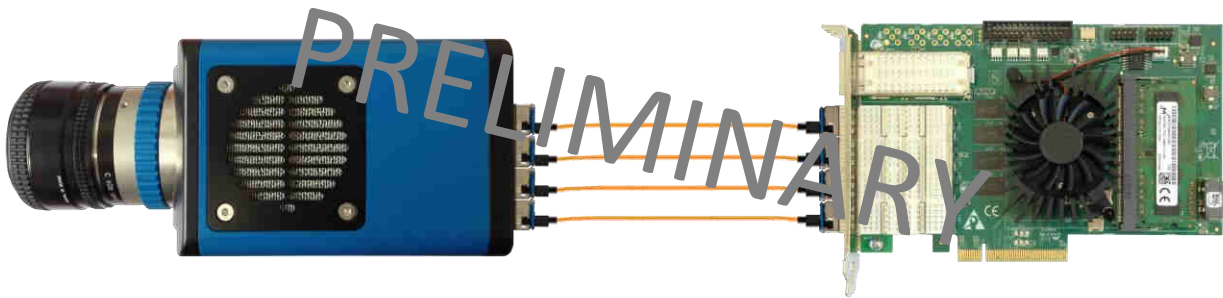


Figure 10 : Komodo II Fiber Bidirectional SFP+ option

### 6.3.2 CWDM Option

In CWDM each optical SFP+ module operates at different wavelength and then an optical multiplexer is used to mix all the signals into a single fiber. In this mode the number of cables required in the infrastructure can down to two cables or even single cable. The CWDM also can be used over existing infrastructure, sharing the same fiber cables with other applications. Two available CWDM modes (for single or dual fibers) are described in Figure 11 and Figure 12. For assignment of CWDM wavelengths please contact KAYA Instruments representative.

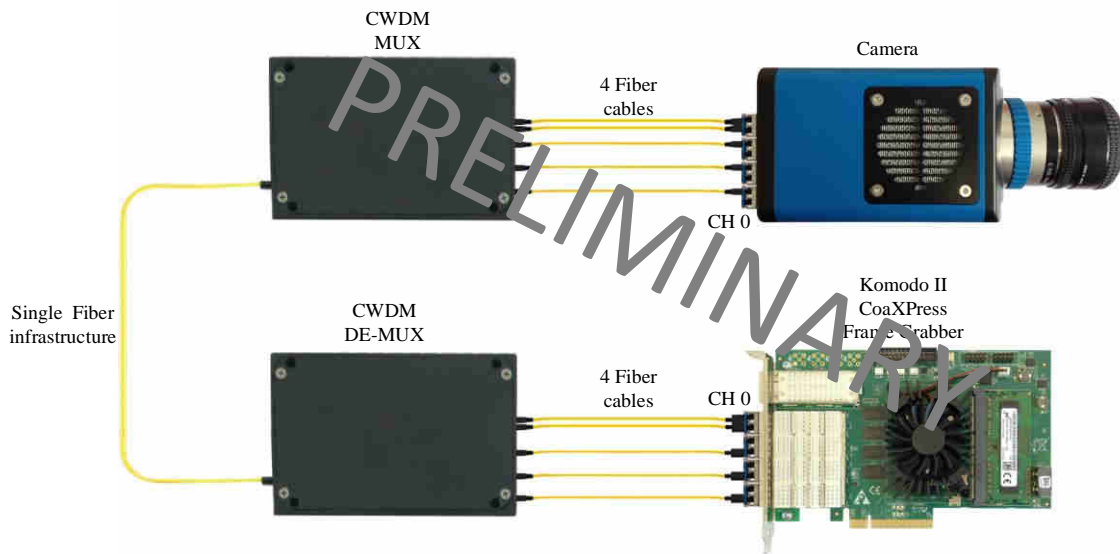


Figure 11 : CWDM mode for single fiber

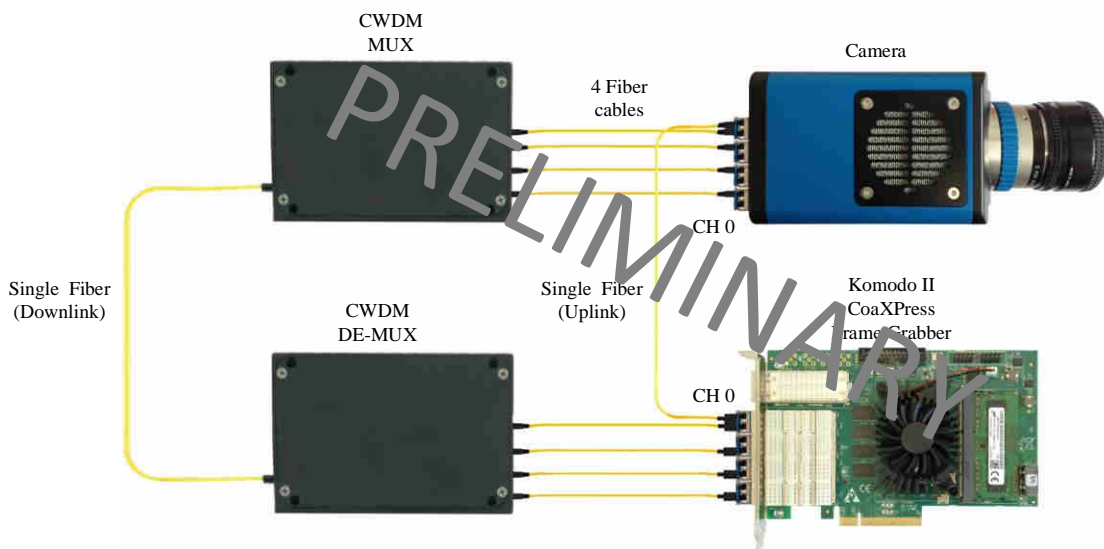


Figure 12 : CWDM mode for dual fiber

### 7.1 Komodo II Fiber Block Diagram

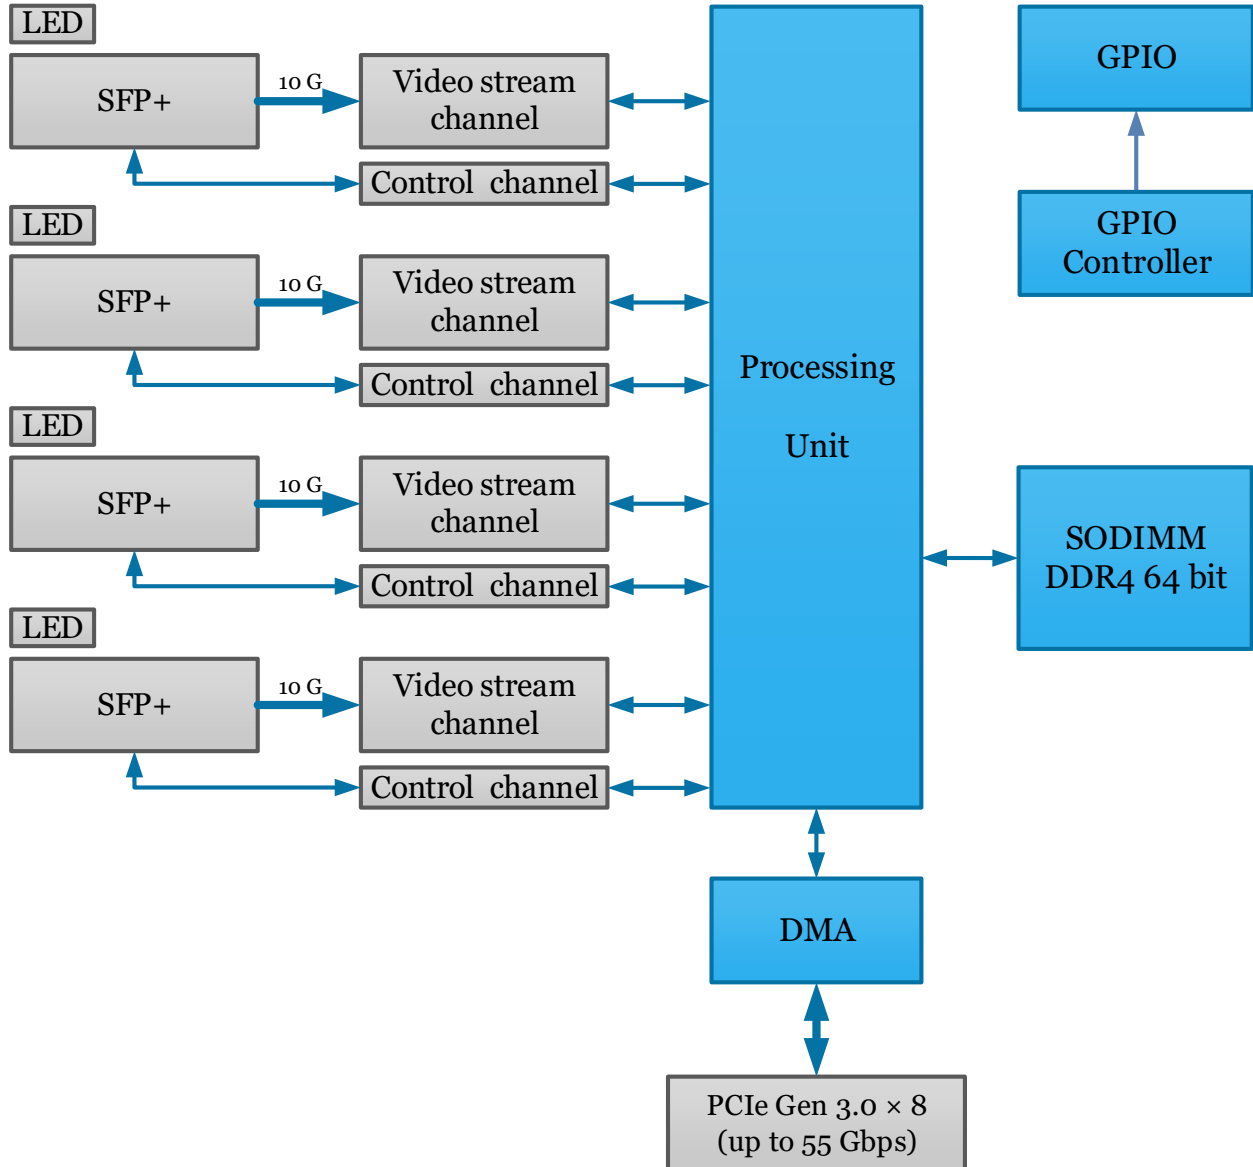


Figure 13 : Komodo II Fiber Block Diagram

### 7.2 Komodo II Fiber LEDs

Komodo II Fiber Frame Grabber is equipped with indication bi-color LED for each SFP+ connector.

The LEDs behave according to definition in Fiber standard. The LEDs' different states are described in Table 1.

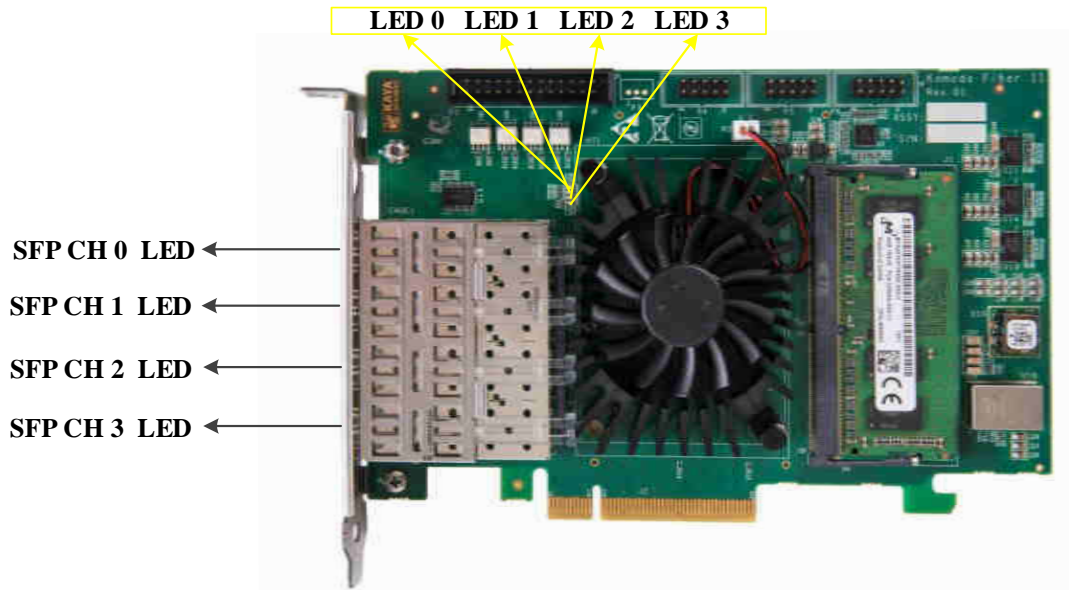


Figure 14 : Komodo II Fiber LED’s locations

LED state	Description
Solid orange	System is not initialized
Slow pulse red	No camera is connected
Fast flash orange	Connection detection in progress
Solid green	Camera is connected, no data being transferred
Slow pulse orange	Camera connected. Waiting for trigger event
Fast flash green	Camera connected , data is being transferred
Slow flash alternate green / orange	Connection test packets being sent

Table 1 : Komodo II Fiber links status LED’s

In addition to SFP+ links LEDs, the Komodo II Fiber Frame Grabber is equipped with status LEDs.

Status LEDs functionality is described in Table 2:

LED #	Description
LED 0	Alive led. Blinks when the Frame Grabber receives clock from PCIe
LED 1	PCIe L0 state. When lit, indicates that the PCIe interface is powered up at active state.
LED 2	Gen3 PCIe indicator. When lit indicates that PCIe is working as Gen3. When not lit the Frame Grabber operates either as PCIe Gen1 or Gen2
LED 3	Lane's indicator. When lit, indicates that all 8 PCIe lanes are up. If not lit, one or four lanes are up.

Table 2 : Komodo II Fiber status LED’s

### 7.3 Auxiliary Input/Output signals

The auxiliary signal of Komodo II Fiber Frame Grabber can be used to initiate on-board events, transmitted to other devices or rerouted from other signals, such as triggers and GPIO's.

Additionally, these auxiliary signals can be used to communicate with complex devices, such as encoders, strobe controls and drive controls.

The GPIOs can be controlled from the Vision Point API and be set as a trigger sources. The API enables routing of any input to any output as well as to the CoaXPress IO and Trigger lines. Please see the API documentation for more information regarding the GPIO configuration.

The GPIOs of Komodo II Fiber Frame Grabber are routed to single IO header with 2.54 mm (26-pin 2-row 100 th) pitch and an external on bracket I/O connector (DB15 - 15-pin 3-row D-Sub High density, panel mount, through hole, right angle).

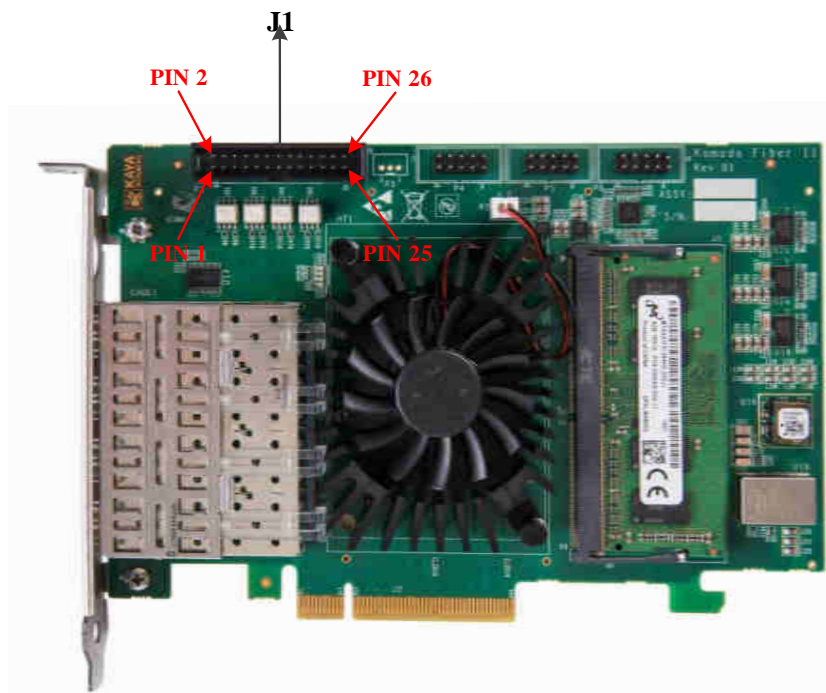


Figure 15 : GPIO connectors location



The pinout of IO connector is as described in Table 3.

Pin No.	Signal Name	Function	Electrical Standard	Description
1	LVDS Input 0p	LVDS input	LVDS	Positive signal of LVDS pair
2	LVDS Input 0n	LVDS input	LVDS	Positive signal of LVDS pair
3	LVDS Input 1p	LVDS input	LVDS	Negative signal of LVDS pair
4	LVDS Input 1n	LVDS input	LVDS	Negative signal of LVDS pair
5	LVDS Output 0p	LVDS output	LVDS	Positive signal of LVDS pair
6	LVDS Output 0n	LVDS output	LVDS	Positive signal of LVDS pair
7	LVDS Output 1p	LVDS output	LVDS	Negative signal of LVDS pair
8	LVDS Output 1n	LVDS output	LVDS	Negative signal of LVDS pair
9	OptoCoupled Output 0	Opto-Isolated output	Up to 70V	Optically isolated outputs
10	OptoCoupled Output 1	Opto-Isolated output	Up to 70V	Optically isolated outputs
11	OptoCoupled Output 2	Opto-Isolated output	Up to 70V	Optically isolated outputs
12	OptoCoupled Output 3	Opto-Isolated output	Up to 70V	Optically isolated outputs
13	OptoCoupled Input 0	Opto-Isolated input	Up to 70V	Optically isolated inputs
14	OptoCoupled Input 1	Opto-Isolated input	Up to 70V	Optically isolated inputs
15	OptoCoupled Input 2	Opto-Isolated input	Up to 70V	Optically isolated inputs
16	OptoCoupled Input 3	Opto-Isolated input	Up to 70V	Optically isolated inputs
17	OptoCoupled GND	External GND		Ground signal for opto-isolated signals on this connector.
18	GND	Board GND		Reference ground signal
19	TTL 0	GPIO	TTL (Open-drain)	General Purpose IO
20	TTL 1	GPIO	TTL (Open-drain)	General Purpose IO
21	TTL 2	GPIO	TTL (Open-drain)	General Purpose IO
22	TTL 3	GPIO	TTL (Open-drain)	General Purpose IO
23	LVTTL 0	GPIO	LVTTL	General Purpose IO
24	LVTTL 1	GPIO	LVTTL	General Purpose IO
25	LVTTL 2	GPIO	LVTTL	General Purpose IO
26	LVTTL 3	GPIO	LVTTL	General Purpose IO

Table 3 : J1 connector pinout

The electrical connection of the GPIO connector is described following principal schematic diagram:

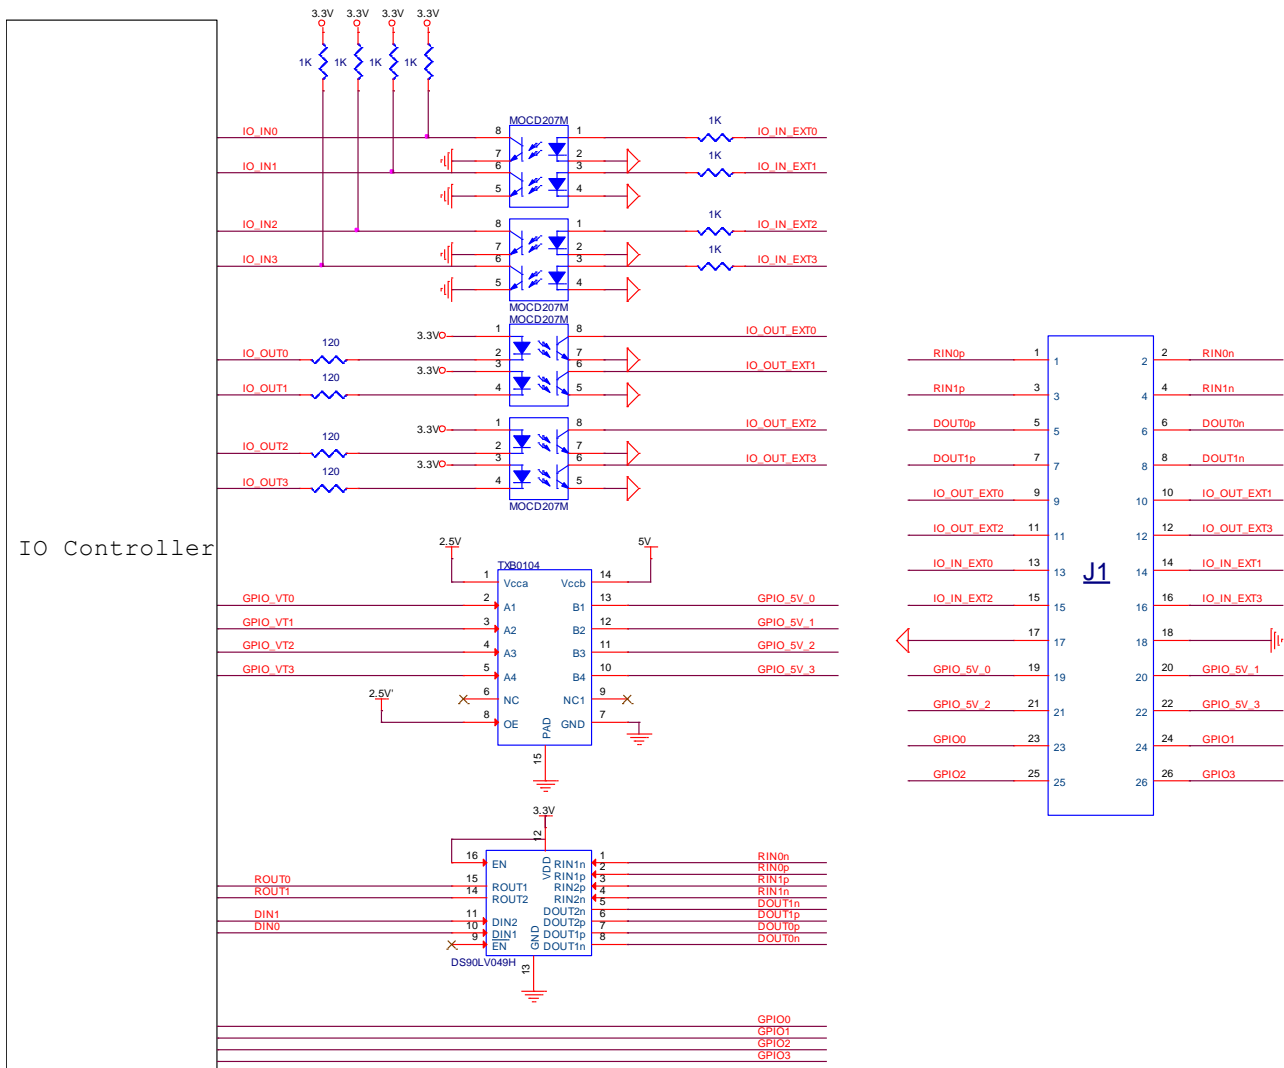


Figure 16 : GPIO Connector schematic

### 7.4 Absolute maximum ratings

Specification	Values
3.3V power supply	-1.0V to +7.0V
12V power supply	-0.3V to 14V
Storage temperature	-55°C to 125°C
Operating ambient temperature	0°C to 50°C

Table 4 : Absolute maximum ratings

Specification	Minimum voltage [V]	Maximum voltage [V]
LVDS	-0.3	3.6
Opto-isolated (in)	-6	60
Opto-isolated (out)	-7	70
TTL	-0.5	6
LVTTL	-0.5	3.9

Note: The maximum current that the Opto-isolated (out) IOs can support is 150mA

Table 5 : Absolute maximum ratings for GPIO

### 7.5 Operating conditions

Parameter	Description	Minimum	Typical	Maximum
3.3 V <sub>cc</sub>	3.3V Supply voltage from PCIe	3.04V	3.3V	3.56V
12V V <sub>cc</sub>	12V Supply voltage from PCIe	11.04V	12V	12.96V
3.3 I <sub>cc</sub> (Host)	Supply Current from 3.3V PCIe power rail	-	2.1A	-
12 I <sub>cc</sub>	Supply Current from 12V PCIe power rail	-	2A	-

Table 6 : Operating conditions

Symbol	Parameter	Condition	Pin	MIN	Typ	MAX	Units	
V <sub>OD</sub>	Differential Output Voltage	R <sub>L</sub> = 100 Ω	D <sub>OUT-</sub> - D <sub>OUT+</sub>	250	350	450	mV	
ΔV <sub>OD</sub>	Change in Magnitude of V <sub>OD</sub> for Complementary Output States				1	35	mV 	
V <sub>OS</sub>	Offset Voltage			1.12 5	1.23	1.375	V	
ΔV <sub>OS</sub>	Change in Magnitude of V <sub>OS</sub> for Complementary Output States				1	25	mV 	
I <sub>OS</sub>	Output Short Circuit Current <sup>(4)</sup>			ENABLED, D <sub>IN</sub> = V <sub>DD</sub> , D <sub>OUT+</sub> = 0 V or D <sub>IN</sub> = GND, D <sub>OUT-</sub> = 0 V		-5.8	-9.0	mA
I <sub>OSD</sub>	Differential Output Short Circuit Current <sup>(4)</sup>			ENABLED, V <sub>OD</sub> = 0 V		-5.8	-9.0	mA
I <sub>OFF</sub>	Power-off Leakage			V <sub>OUT</sub> = 0 V or 3.6 V V <sub>DD</sub> = 0 V or Open		-20	±1	+20

$I_{OZ}$	Output TRI-STATE Current	$EN = 0\text{ V}$ and $EN = V_{DD}$ $V_{OUT} = 0\text{ V}$ or $V_{DD}$		-10	$\pm 1$	+10	$\mu\text{A}$
----------	--------------------------	---	--	-----	---------	-----	---------------

Table 7 : LVDS Output DC specifications (Driver Outputs)

Symbol	Parameter	Condition	Pin	MIN	Typ	MAX	Units
$V_{TH}$	Differential Input High Threshold	$V_{CM} = 1.2\text{ V}, 0.05\text{ V}, 2.35\text{ V}$	$R_{IN+}$ $R_{IN-}$		-15	35	mV
$V_{TL}$	Differential Input Low Threshold			-100	-15		mV
$V_{CMR}$	Common-Mode Voltage Range	$V_{ID} = 100\text{ mV}, V_{DD} = 3.3\text{ V}$		0.05		3	V
$I_{IN}$	Input Current	$V_{DD} = 3.6\text{ V}$ $V_{IN} = 0\text{ V}$ or $2.8\text{ V}$		-12	$\pm 4$	+12	$\mu\text{A}$
		$V_{DD} = 0\text{ V}$ $V_{IN} = 0\text{ V}$ or $2.8\text{ V}$ or $3.6\text{ V}$	-10	$\pm 1$	+10	$\mu\text{A}$	

Table 8 : LVDS Input DC specifications (Receiver Inputs)

Symbol	Parameter	Test condition (note 1)	MIN	MAX	Units
$V_{IH}$	Input High Voltage	$V_{OUT} \geq V_{OH (min)}$ or $V_{OUT} \leq V_{OL (max)}$	2	$V_{DD}+0.3$	V
$V_{IL}$	Input Low Voltage		-0.3	0.8	V
$I_{IN}$	Input Current	$V_{IN} = 0\text{ V}$ or $V_{IN} = V_{DD}$		$\pm 5$	$\mu\text{A}$

Note: Vdd = 3.3V, unless specified otherwise

Table 9 : LVTTTL input specifications

Symbol	Parameter	Test condition	MIN	MAX	Units
$V_{OH}$	Output High Voltage	$V_{DD} = \text{min}, I_{OH} = -2\text{ mA}$	2.4		V
$V_{OL}$	Output Low Voltage	$V_{DD} = \text{min}, I_{OL} = 2\text{ mA}$		0.4	V

Note: Vdd = 3.3V, unless specified otherwise

Table 10 : LVTTTL output specifications

Symbol	Parameter	Test condition (note 1)	MIN	MAX	Units
$V_{IH}$	Input High Voltage	$V_{OUT} \geq V_{OH (min)}$ or $V_{OUT} \leq V_{OL (max)}$	2	5	V
$V_{IL}$	Input Low Voltage		-0.3	0.8	V
$I_{IN}$	Input Current	$V_{IN} = 0\text{ V}$ or $V_{IN} = V_{DD}$		$\pm 5$	$\mu\text{A}$

Note: Vdd = 5V, unless specified otherwise

Table 11 : TTL input specifications

Symbol	Parameter	Test condition	MIN	MAX	Units
V <sub>OH</sub>	Output High Voltage	V <sub>DD</sub> = min, I <sub>OH</sub> = -2 mA	4		V
V <sub>OL</sub>	Output Low Voltage	V <sub>DD</sub> = min, I <sub>OL</sub> = 2 mA		0.4	V

Note: V<sub>DD</sub> = 5V, unless specified otherwise

Table 12 : TTL output specifications

### 7.6 Mechanical dimensions

The Komodo II Fiber Frame Grabber is a half-length PCIe card according to PCI Express Card Electromechanical Specification.

The exact board mechanical dimensions are as defined in Figure 17.

For more detailed information please, contact KAYA Instruments representative.

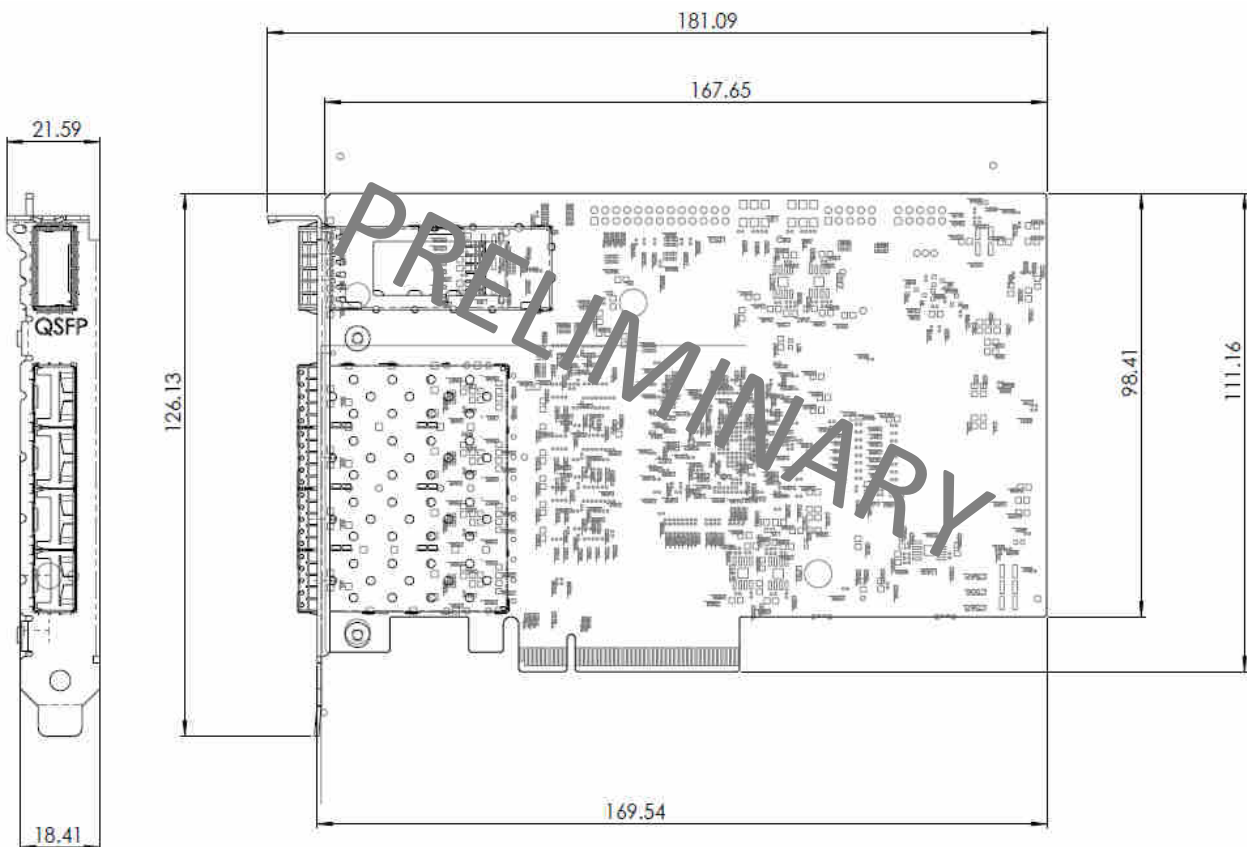


Figure 17 : PCB Mechanical Dimensions

### 8.1 Fiber cables

Optical fibers are widely used to permits transmission over longer distances and at higher bandwidths than other forms of communication. Fibers are used instead of metal wires because signals travel along them with less loss and are also immune to electromagnetic interference.

Fibers that support many propagation paths or transverse modes are called multi-mode fibers (MMF), while those that only support a single mode are called single-mode fibers (SMF). Multi-mode fibers generally are used for short-distance communication links and for applications where high power must be transmitted. Single-mode fibers are used for most communication links longer than 300 meters (1,200 ft.).

### 9.1 Ordering information

Item name	Item part number
Komodo II Fiber Frame Grabber	KY-FGFII
SFP+ 1310nm 10km single-mode module	KY-SFP-10GLR-31
SFP+ 850nm 300m multi-mode module	KY-SFP-10G85-3M
SFP+ bidirectional connection module	KY-BSFP-10G33-10
SFP+ bidirectional connection module	KY-BSFP-10G23-10
SFP+ 1310nm 10km Bidirectional module	KY-SFP-10G31-10BIDI
Fiber cable - single-mode x meter	KY-FCA-S-SM-LC-LC-XXX.X
Fiber cable - multi-mode x meter	KY-FCA-S-MM-LC-LC-XXX.X

Table 13 : Ordering Information

We are offering variety of modules and customized cable assembly, to fit your application exact needs.

Please, Contact KAYA Instruments' representative for any question and services.

We have the expertise and experiences to develop a suitable solution dedicated to customer's application, prototypes or production.